


## EXP Relay module

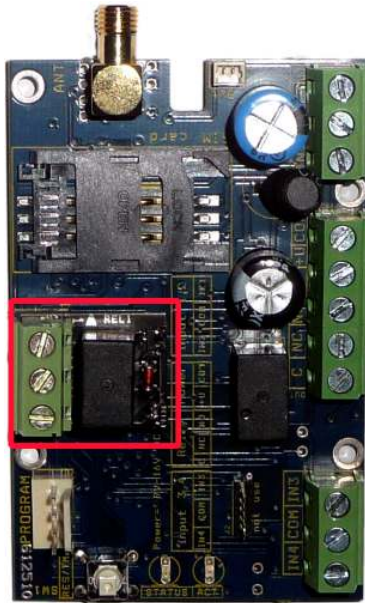

Expand module with one output: max. 50VDC / 1A

Expand module can be connect to the panel is not under voltage.

In the ProRead software you can find this module with the name: Output2. You can set up the same functions like the Output1, which is on the board. (mono or bistable, and siren mode)

**Do not connect the 230V direct to the module.** Please use an external relay if you would like to switch the 230V.

The minimum GSM software version is the 3.2 to use this module.

### Connectors on the panel:

C = Common

NC=Normal Close

NO= Normal Open

